



# FLEX-GUARD® BLADE REPLACEMENT (SK-6)

(RSKB Blade)

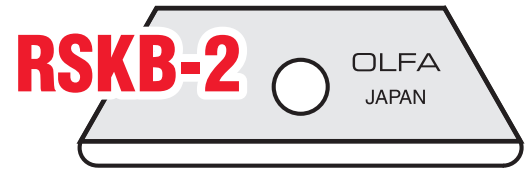


## Step 1

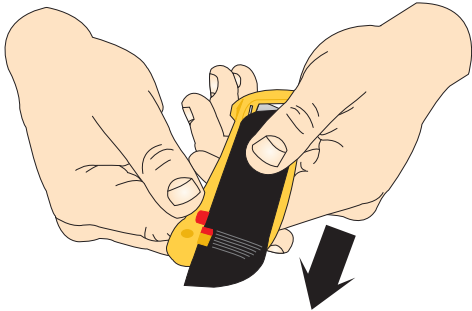


Step 1. Push in red button. Place your thumb on the black slide cover and push towards rear of cutter.

## Step 2

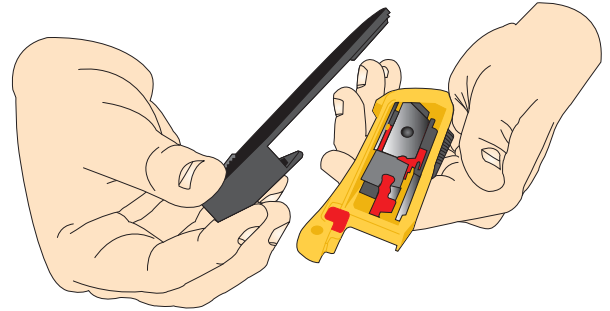


Step 2. Remove black slide cover and set to the side.

## Step 3

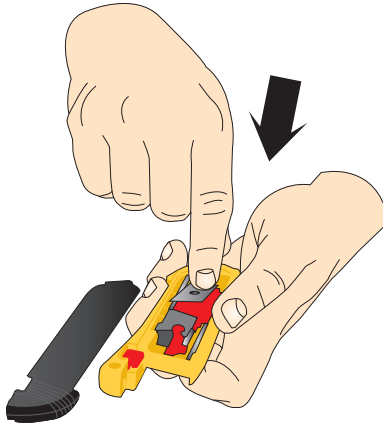

Step 3. Using your index finger, push down on blade causing blade to tilt upwards.

## Step 4

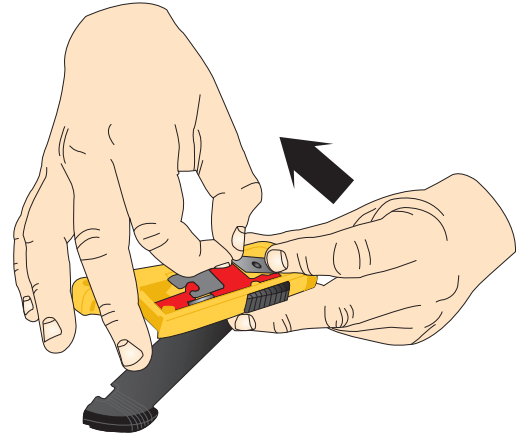

Step 4. Pull blade out and either flip over to use other side or if both edges are dull, replace with new OLFA "RSKB" blade. Replace black slide cover and push red button to lock. Discard used blade in a facility-approved containers.

**OLFA**®  
Best made cutting tools in the world.®